
# DOR-O-MATIC

# 1390 Dogging Kit Instruction

## **PARTS LIST**

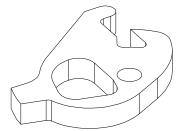

Dogging cam (4270102815)



Activating cam (4270106551)




Spacer (4270108584)




Retaining ring (4299100732)

### **DOGGING REMOVAL**


Remove device from door (refer to device manual) and remove cover to expose cam assembly.

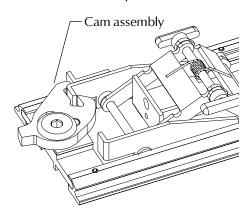

Remove old cam assembly.

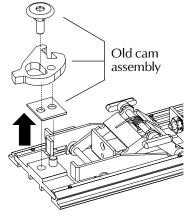

2 Cut retaining ring on backside of device (rod end) with side cutters and remove.

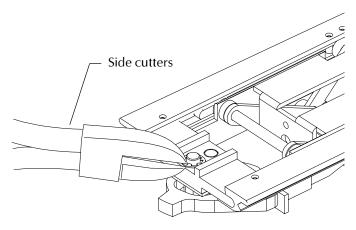

Compare thickness of old activating cam to new activating cam. New cam is 1/4" thick.

If old cam is thick style, go to step **6**. Thick (old style)

If old cam is thin style, go to step **6**. Thin (new style)

ARCHITECTURAL HARDWARE

Copyright © 2000 Ingersoll-Rand Company. All rights reserved.

#### **DOGGING INSTALLATION**


6

#### NOTE

This step only required if new activating cam is thinner than old activating cam. If cams are same thickness, go to step 6.


Remove excess material from dowel pin.


- 5.1. Use dremmel or equivalent cutting tool to remove unnecessary material from dowel pin. Pin should be cut to approximately 1/4"-5/16" above device surface and be deburred.
- 5.2. Clean device of shavings and any debris from cutting.

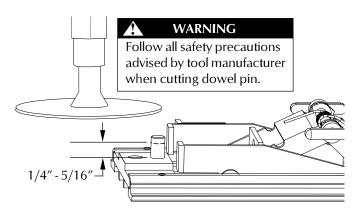



Verify dowel pin length is correct.

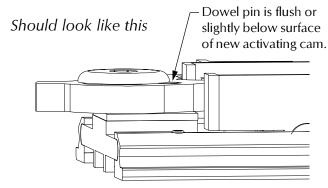

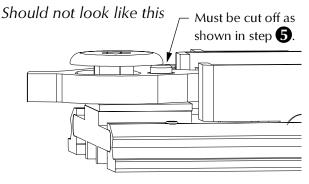


9

Reassemble device and replace device on door (refer to device manual).




Place new spacer, activating cam, and dogging cam on device (verify activating cam is in correct handing position).

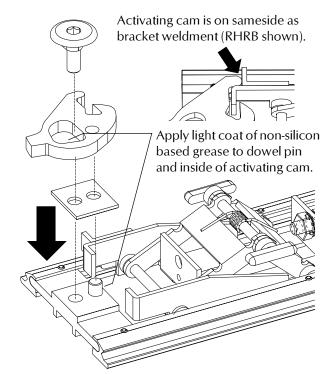

Install new retaining ring over new dogging cam using a hammer and 5/16" socket. Support back of device while driving the ring into place.

NEW RETAINING RING MUST BE USED WITH NEW DOGGING CAM.

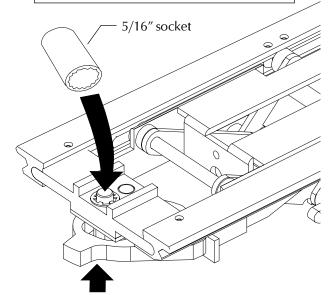

Verify retaining ring is snug after installation and cam pivots freely.