


ASSEMBLY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY

#2194

FILE LOCK INSTRUCTION SHEET

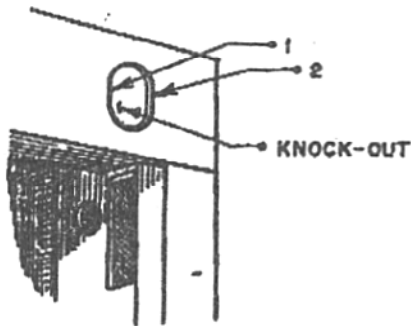

STEP 1


REMOVE THE TOP MOST DRAWER. TAP KNOCK-OUT ON TOP RIGHT HAND CORNER ALTERNATELY AT POINTS 1 & 2 WITH A BLUNT TOOL AND HAMMER, UNTIL KNOCK-OUT IS LOOSE ENOUGH TO BE GRIPPED FROM REAR WITH PLIERS AND REMOVED.

CAUTION

DO NOT BEND METAL SURROUNDING KNOCK-OUT


STEP 2

INSERT PRE-ASSEMBLED LOCK ASSEMBLY INTO KNOCK-OUT HOLE. FIRMLY HOLD LOCK ASSEMBLY FROM FRONT AND INSERT CLIP ON BACK SIDE OF LOCK HOUSING; PUSH AS FAR AS POSSIBLE.

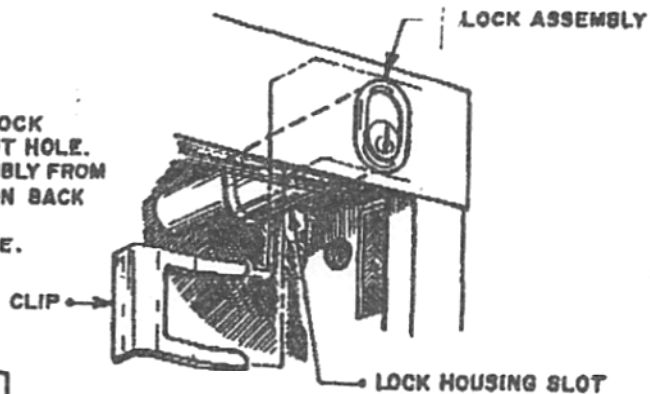


STEP 3

INSERT LOCK LIFTER INTO LOCKING BAR SLOT, AND LOCK HOUSING SLOT.

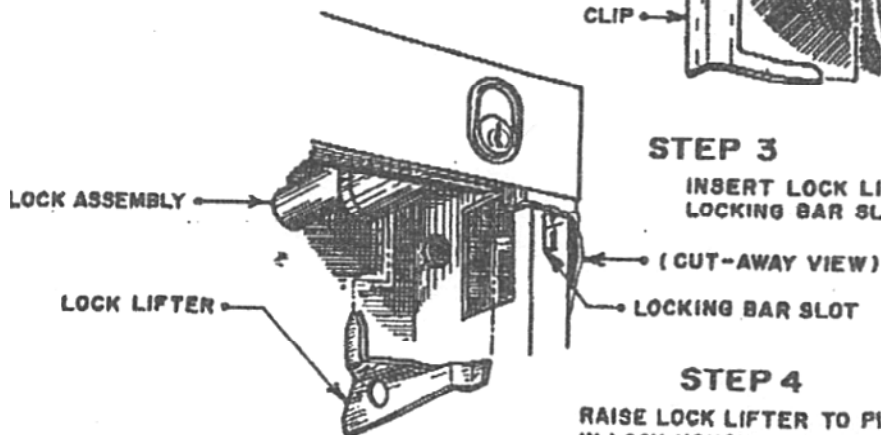

STEP 4

RAISE LOCK LIFTER TO PLACE IN LOCK HOUSING SLOT. ALSO MATCH HOLES IN THE FRONT UPRIGHT. INSERT FASTENER.

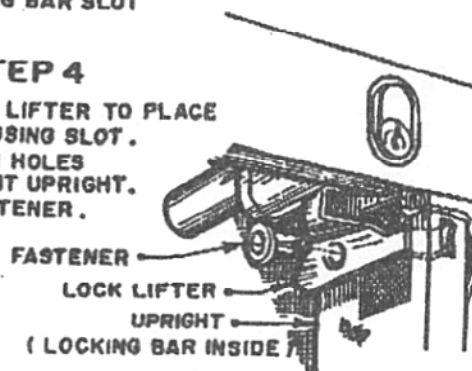

Buy Online:
www.MrLock.com