


ITEM #2197

**FOR FILING CABINET LOCK
FOR VERTICAL FILES
PRODUCED AFTER 2/99 BY:
ANDERSON-HICKEY,
PREMIER, & GLOBE.
(DOES NOT FIT HON OR
GLOBAL)**

**FOR OLDER FILES
(PRE 2/99), USE SRS
MODEL #2194
PLUNGER LOCK KIT**

Buy Online:
www.MrLock.com

INSTALLATION INSTRUCTIONS:


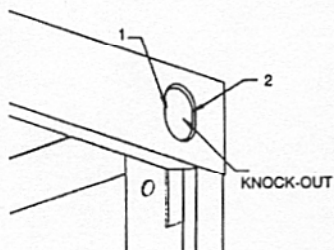


STEP 1.
Remove the top most drawer by opening completely, lifting up approximately 2", and pulling free of cradle. Tap knock-out on top right hand corner alternately at points 1 & 2 with a punch and hammer, until knock-out is loose enough to be gripped from rear with pliers and removed.

CAUTION
Do not bend metal surrounding knock-out.

STEP 2.

Insert pre-assembled lock assembly into knock-out hole. Note: Lock cam should be down and to the right in the unlocked position. Rotation of the lock cam is counterclockwise to lock. Firmly hold lock assembly from front and insert retaining clip on back side of lock assembly pushing clip as far as possible.

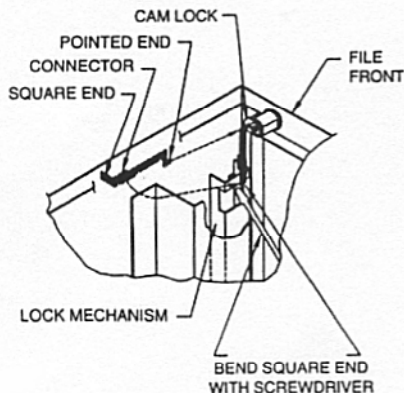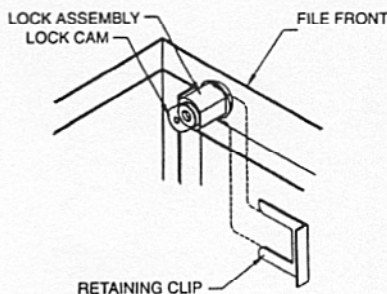

STEP 3.

Insert pointed end of connector into predrilled hole in lock cam (use the flashlight if needed). Pivot connector downward to vertical position. Rotate square end of connector to the right intersecting the lock mechanism. Use a screwdriver to bend the square end of connector up approximately 45° to secure. Turn key a few times to check operation.

Reinstall drawer by lowering rear of drawer into cradle assembly and sliding drawer closed. Carefully slide drawer open to verify drawer slides freely and drawer stop operates properly.