

INSTALLATION INSTRUCTIONS Replacement Spindle Kit 579

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 • www.sargentlock.com

TOOLS REQUIRED

1. 3/32" PUNCH
2. 1/4" PUNCH
3. BALL PIER HAMMER

STEP

- ① PLACE OLD LEVER ASSEMBLY ON SOLID SURFACE. USE RAG OR PAD TO PREVENT MARRING FINISH.

STEP


- ② DRIVE OUT ROLL PIN USING 3/32" PUNCH. DISCARD PIN.

STEP

- ③ REMOVE OLD SPINDLE AND BUSHING.

PIN REMOVAL

OUTSIDE
HANDLE
ASSEMBLY

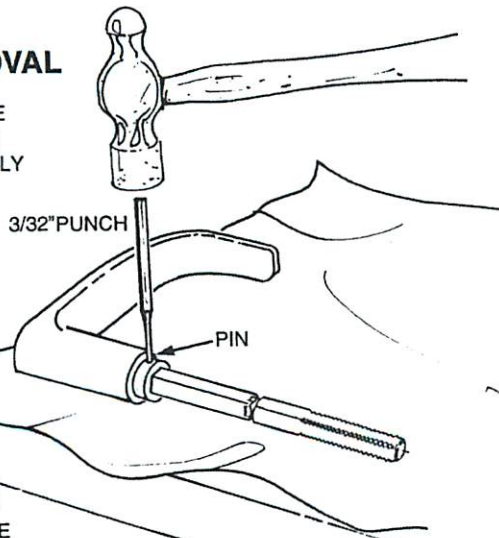

STEP

- ④ INSTALL NEW SPINDLE ASSEMBLY INTO LEVER OPENING...ALIGN PIN HOLE IN LEVER SHANK.


STEP

- ⑤ PLACE NEW ROLL PIN IN HOLE OF LEVER.


STEP

- ⑥ DRIVE PIN FLUSH WITH LEVER USING 1/4" PUNCH.

PIN INSERTION

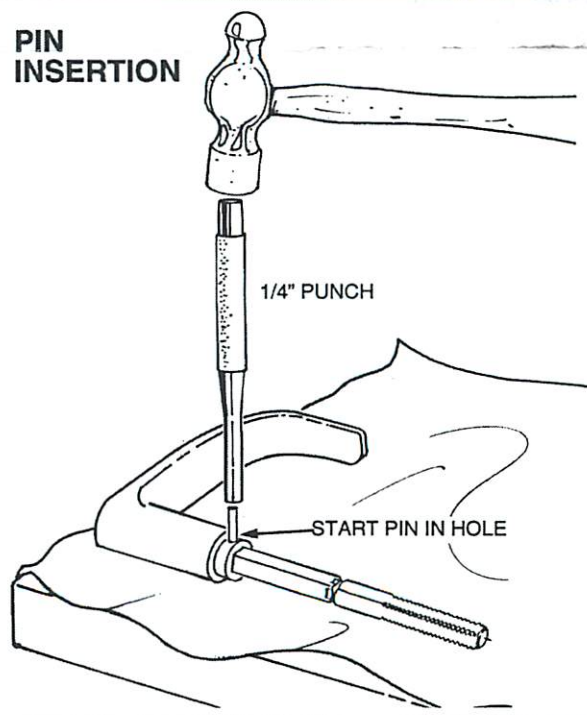

OUTSIDE HANDLE ASSEMBLY

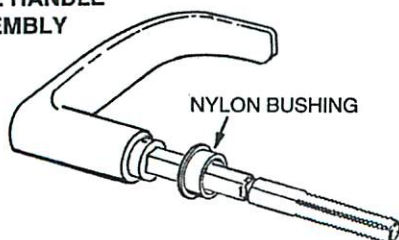

STEP

⑦

REASSEMBLE SPINDLE AND LEVERS TO DOOR USING NEW PARTS FURNISHED.

PLEASE NOTE:

AFTER THE LEVER ADAPTER IS SCREWED ONTO THE SPINDLE AND BOTTOMED ON THE NYLON BUSHING, A MINIMUM OF FOUR SPINDLE THREADS SHOULD BE EXPOSED. THIS WILL ALLOW PROPER ENGAGEMENT IN THE LEVER HANDLE BROACH.

APPLY HANDLES

1. FROM OUTSIDE FACE OF DOOR, APPLY NYLON BUSHING AND INSERT OUTSIDE HANDLE ASSEMBLY.
2. SCREW LEVER ADAPTER ONTO INSIDE SPINDLE UNTIL BOTTOMED ON NYLON BUSHING.
3. SLIDE INSIDE HANDLE OVER LEVER ADAPTER AND INSIDE SPINDLE. LOCK IN PLACE WITH HANDLE SCREW (USE 1/8" HEX WRENCH).

