

INSTRUCTIONS

Directions for use:

Mounting plate affixes directly to glass. Remove any tint or film on glass and then clean it with water. (Do not use any glass cleaner; i.e. windex, etc.). To lock, slide lock onto mounting plate (see ill. #2). To unlock, turn key and slide off mounting plate. Door or window will slide over mounting plate.

Installation: Read All Directions First


1. Using supplied stick, flatten one end of the packet to move contents of both cavities to one end.
2. Tear off strip at the flattened end to open both cavities.
3. Lay folded packet on supplied plastic sheet and push out entire contents of both cavities using the stick (see fig. 1). Press down hard to ensure all contents are removed.
4. Mix the hardener and resin together thoroughly... until mix is uniform in color.

5 thru 8 of the directions are continued on the next page.

INSTRUCTIONS

continued...

5. Remove the baseplate from the lock, and using the stick, spread a thin layer over the entire back of plate. Install baseplate immediately on surface a minimum 3/8" from opposite glass, (see fig. 2), with a twisting motion to remove any existing air pockets between the baseplate and the surface of the glass.
6. Mix takes approximately 5-8 minutes to set with a full cure in 24 hours. Hold in place with a piece of tape.
7. Excess adhesive can be removed after 24 hours with a razorblade. Lock can be installed for use after 1 hour.
8. Call with any questions prior to installation.

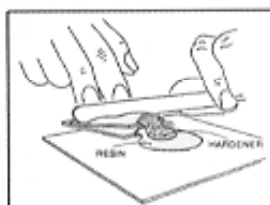

(Installation Fig. 1)

(Installation Fig. 2)

