


# ASSEMBLY INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY

#2194

## FILE LOCK INSTRUCTION SHEET

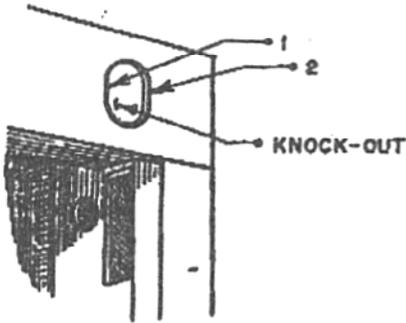

### STEP 1



REMOVE THE TOP MOST DRAWER. TAP KNOCK-OUT ON TOP RIGHT HAND CORNER ALTERNATELY AT POINTS 1 & 2 WITH A BLUNT TOOL AND HAMMER, UNTIL KNOCK-OUT IS LOOSE ENOUGH TO BE GRIPPED FROM REAR WITH PLIERS AND REMOVED.

### CAUTION

DO NOT BEND METAL SURROUNDING KNOCK-OUT

### STEP 2

INSERT PRE-ASSEMBLED LOCK ASSEMBLY INTO KNOCK-OUT HOLE. FIRMLY HOLD LOCK ASSEMBLY FROM FRONT AND INSERT CLIP ON BACK SIDE OF LOCK HOUSING ; PUSH AS FAR AS POSSIBLE.

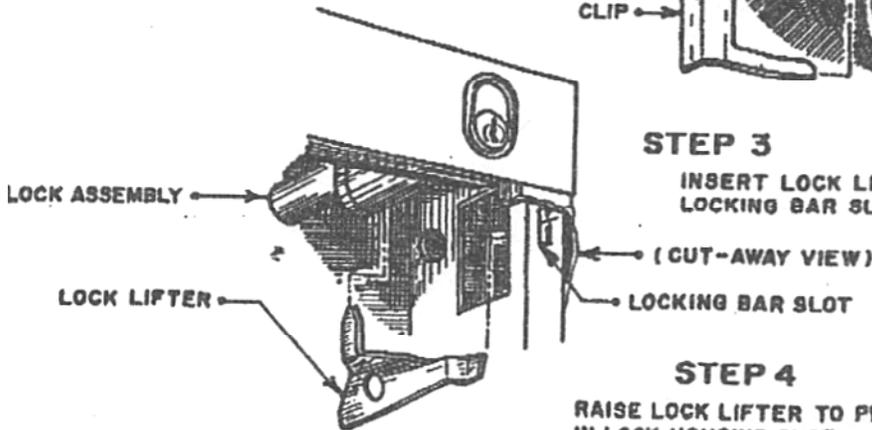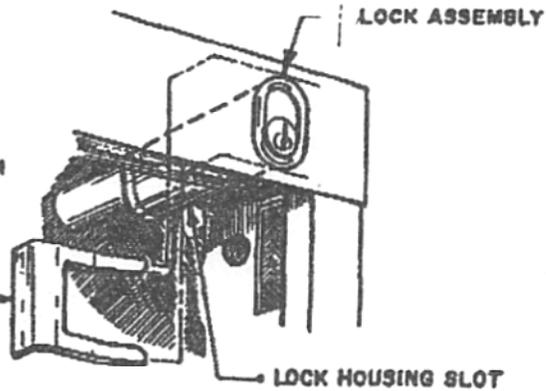


### STEP 3

INSERT LOCK LIFTER INTO LOCKING BAR SLOT, AND LOCK HOUSING SLOT.

### STEP 4

RAISE LOCK LIFTER TO PLACE IN LOCK HOUSING SLOT. ALSO MATCH HOLES IN THE FRONT UPRIGHT. INSERT FASTENER.

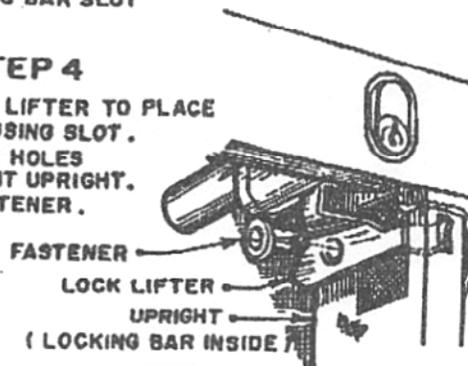

Buy Online:  
[www.MrLock.com](http://www.MrLock.com)