

INSTRUCTIONS

Tools Required:

Phillips Screwdriver ----- Ruler and Pencil
Drill & Drill bits - (1/8" bit)


Installation: Read All Directions First

- 1.** Determine position of lock by holding lock and strike in desired location. Depending on installation, the strike can be mounted one of two ways. (See fig. 1) Note where and how the latch engages the strike. Mark the desired location of both parts.
- 2.** Using the spacer as a template, mark the four mounting screw hole positions with a pencil. Using the strike/keeper, mark the positions of the two holes. Drill all six 1/8" holes being careful not to hit any glass.
- 3.** Install lock and strike using the screws provided. On glass doors use two 1" screws to avoid hitting glass. Use of the spacer is optional depending on the specific location.

Installation figures are on the next page...


INSTRUCTIONS

continued...

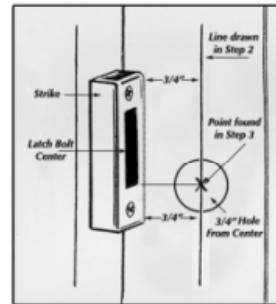

Installation Fig. 1

Installation Fig. 2

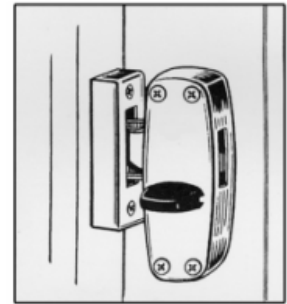

Purchase Online
<http://www.mrllock.com>